

SU2000-NT68F63X Device List

日期：2003/05/09 版本：3.20

<u>MENUFACTURE</u>	<u>DEVICE</u>	<u>ADAPTOR</u>	<u>NOTE</u>
NOVATEK	NT68F63U	2000-NT68F632-SDIP42 + NT68F632 to NT68FXXX 2000-NT68F631-SDIP42 + NT68F631 to NT68FXXX(SDIP42)	三個 Jumper 都要插上
	NT68F63L	2000-NT68F632-PLCC44 + NT68F632 to NT68FXXX 2000-NT68F631-PLCC44 + NT68F631 to NT68FXXX(PLCC44)	三個 Jumper 都要插上
	NT68F65U	2000-NT68F632-SDIP42 + NT68F632 to NT68FXXX 2000-NT68F631-SDIP42 + NT68F631 to NT68FXXX(SDIP42)	三個 Jumper 都要插上
	NT68F65L	2000-NT68F632-PLCC44 + NT68F632 to NT68FXXX 2000-NT68F631-PLCC44 + NT68F631 to NT68FXXX(PLCC44)	三個 Jumper 都要插上
	NT68F631U	2000-NT68F632-SDIP42 + NT68F632 to NT68FXXX + NT68FXXX to NT68F631/633(SDIP42) 2000-NT68F631-SDIP42 + NT68F631 to NT68FXXX(SDIP42) + NT68FXXX to NT68F631/633(SDIP42)	三個 Jumper 都要拿掉
	NT68F631L	2000-NT68F632-PLCC44 + NT68F632 to NT68FXXX + NT68FXXX to NT68F631/633(PLCC44) 2000-NT68F631-PLCC44 + NT68F631 to NT68FXXX(PLCC44) + NT68FXXX to NT68F631/633(PLCC44)	三個 Jumper 都要拿掉
	NT68F632U	2000-NT68F632-SDIP42 + NT68F632 to NT68FXXX 2000-NT68F631-SDIP42 + NT68F631 to NT68FXXX(SDIP42)	只插上中間的 Jumper
	NT68F632L	2000-NT68F632-PLCC44 + NT68F632 to NT68FXXX 2000-NT68F631-PLCC44 + NT68F631 to NT68FXXX(PLCC44)	只插上中間的 Jumper