MCS-51 Writer —	Devices Supporte	d	
MCS-51 Writer MCS-51 Writer main unit x1, USB cable x1, daptor x1, PC Software, drivers and manuals on CD-ROM x1	Devices Supporter ATMEL AT89C51 AT89C52 AT89LV51 AT89LV52 AT89LV55 AT89LV55 AT89C55WD AT89C55WD AT89C55WD AT89S51 AT89S52 AT89LS51 AT89LS52 AT89LS52 AT89LS52 AT89LS52 AT89LS52 AT89LS8252 AT8	d ISSI IS89C51 IS89C52 IS89C54 IS89C54 IS89C64 IS89E58 IS89E64 IS89E51A IS89C51A IS89C51A IS89C52A IS89C51A IS89C52A IS89LV51A IS89LV52A TEMIC TSC87C51 TSC87C51 TSC87C52 WINBOND W77E58 W77LE58 W78E51B W78E51B W78E52B W78E54 W78E54B <td>PHILIPS P89C51UB P89C52UB P89C54UB P89C58UB P89C51RA+ P89C51RB+ P89C51RD+ P89C51RD2H P89C51RD2H P89C51RD2H P89C51RD2 P89C54X2 P89C54 P89C660 P89C662 P89C664 P89C668 P89C138MB P89C238MB P89C238MB P89C38MB</td>	PHILIPS P89C51UB P89C52UB P89C54UB P89C58UB P89C51RA+ P89C51RB+ P89C51RD+ P89C51RD2H P89C51RD2H P89C51RD2H P89C51RD2 P89C54X2 P89C54 P89C660 P89C662 P89C664 P89C668 P89C138MB P89C238MB P89C238MB P89C38MB
Textool handler Textool	87C51FC 87C51RA 87C51RB 87C51RC 87C52 87C54 87C58	W78E516 W78E516B W78E62 W78E62B W78LE516 W78LE58	SST89C54 SST89C58 SST89F54 SST89F58

Note

- 1. It is preferred to use an internal USB port of your PC. External USB ports are not recommended because of shared bandwidth and possible compatibility issues of other USB devices.
- 2. Set Font Size to [small fonts] (96 dpi) to have the optimal display.

Install software and driver

- 1. Set Font Size to [small fonts] (96 dpi) to have the optimal display.
 - 1.1 Click the right button on the desktop. -> Select the [Properties] at the bottom of the function menu.
 - 1.2 Select [Settings] and then click the [Advanced] to set Font Size.
- 2. Install the software before connecting the MCS-51 Writer to the PC.
 - 2.1 Insert the software CD into your CD-ROM drive. Normally the installation program will start automatically (if Auto Run is enabled for your CD-drive). Follow the instructions to complete installation.
- 2.2 If Auto Run doesn't work, click [Setup.exe] in the CD directory to start the installation.
- 3. Install the driver for the MCS-51 Writer hardware.
 - 3.1 Make sure the MCS-51 Writer power is [OFF]. Connect the power adapter to the MCS-51 Writer and a power outlet.
 - 3.2 Connect the USB cable to PC USB port and to the programmer USB port.
 - 3.3 Turn the MCS-51 Writer power to [ON]. Windows will now start the [Found New Hardware Wizard].
- 3.4 Install Hardware Device Driver -> Search for a suitable driver for my device (recommended)
- 3.5 Select Optional search locations -> CD-ROM drives
- 3.6 Driver Files Search Result -> Windows will find a driver for this device ...\driver\flashwriter.inf
- 3.7 Click [Finish] in the Found New Hardware Wizard

The MCS-51 Writer software and drivers have now been installed and the unit is ready to work.





LEAP Electronic Co., Ltd. Tel : + 886-2-2999 1860 Fax : + 886-2-2999 9873 http : //www.leap.com.tw Email: service@leap.com.tw





